

RF Single Color Remote Controller

 
09.02802.04111




Important: Read All Instructions Prior to Installation

Function introduction

Click to turn on/off,
Press and hold down to increase/
decrease light intensity

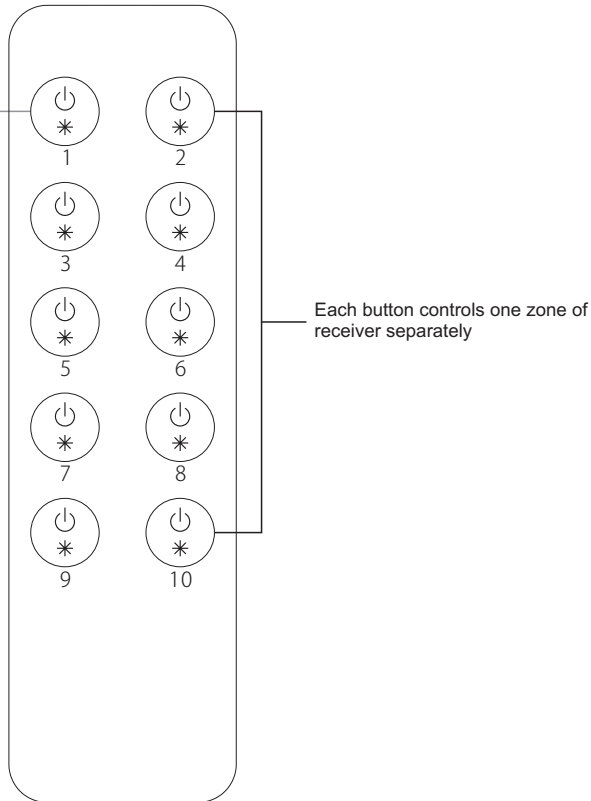

Front side

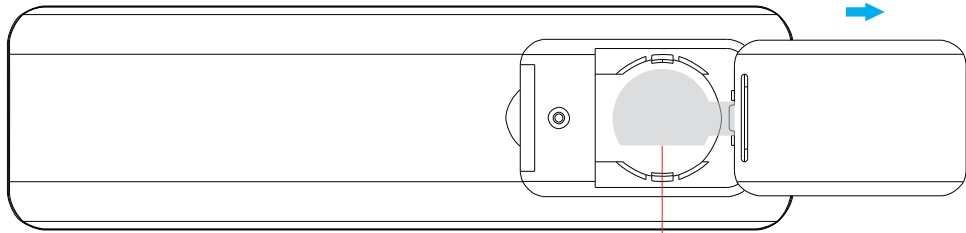 

Note: Before the first use, please remove the protective film on the battery.

Back side

Product Data


Output	RF signal
Operation Frequency	868/915/434MHz
Power Supply	3V(1xCR2025 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	136.3x38.9x10.7mm

- Control 10 zones of receivers separately
- Single color controller
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20


Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

 
Pair with RF receiver

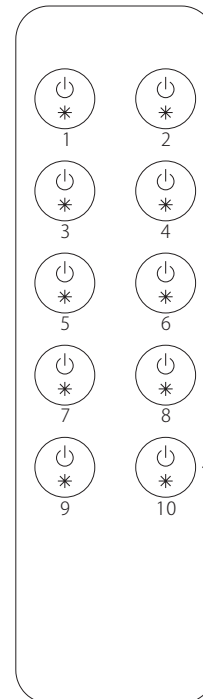

 
Step 1: Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

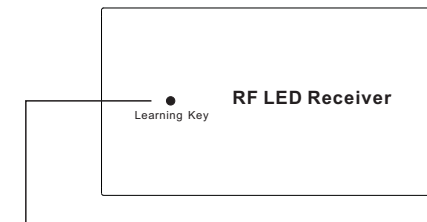

Step 2: Click the "Learning Key" button on RF receiver to set it into pairing status


Step 3: Choose one zone and click  of the zone (e.g. zone 10), LED lights connected with the RF receiver flicker once means the receiver is paired with zone 10 successfully.

After pairing, click or hold  * of 1/2/3/4/5/6/7/8/9/10 to control each zone separately

Note: one receiver can be paired with max 8 remote controls.

If you use multiple receivers, you have two choices:

 Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

